

5.

REFERENCE DESIGNATION NUMBERS VS. ASSY DRAWING NUMBERS.

The electrical reference designation numbers in Table 6-4 are assigned to ESE assemblies or to assemblies carrying ESE cable. The drawing given for each assembly should call out other drawings showing any assembly or installation information required.

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS
ASSY DRAWING NUMBERS

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
5085	S-IC Engine Servicing Plate	J75M09312
5086	S-IC Engine Servicing Boom Plate	J75M09312-3A
5087	S-IC Engine Servicing Top Plate	J75M09312-1A
5088	S-IC Engine Servicing Platform (Pad)	*E75M51238
5089	F-1 Engine Skirt Instl. Distr.	E75M13209
5347	LCC Integration Rack Assy #1	D75M15416
5348	LCC Integration Rack Assy #2	D75M15417
5349	LCC Cable Assy Installation	D75M15419
6000	Deck Distributor, F-1 Engine Servicing Platform	E75M13211
6000A1	Platform Controller, F-1 Engine Servicing Platform	D75M13570
6005	Tail Service Mast 3-4	*J75M12019
6006	Tail Service Mast 1-2	*J75M12023
6007	Tail Service Mast 3-2	*J75M12027
6008	Control Distributor, TSM 3-4	F75M12017
6009	Control Distributor, TSM 1-2	F75M12025
6010	Control Distributor, TSM 3-2	F75M12029
6011	Interface Plate, TSM 3-4	J75M11882
6012	Interface Plate, TSM 1-2	J75M11902
6013	Interface Plate, TSM 3-2	J75M11932
6014	Interface Plate, Holddown Arm #1	J75M05972-677
6015	Interface Plate, Holddown Arm #2	J75M05972-681
6016	Interface Plate, Holddown Arm #3	J75M05972-678
6017	Interface Plate, Holddown Arm #4	J75M05972-682
6019	Service Plate, Holddown Arm #2	E75M06443
6021	Service Plate, Holddown Arm #4	E75M06443
6023	Launcher Accessories Control Distributor #1	F75M14254
	* Electrical Installation Drawing	

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6024	Launcher Accessories Control Distributor #2	F75M11651
6026	Primary Liftoff Switch, Holddown Arm #2	J75M12231
6027	Secondary Liftoff Switch, Holddown Arm #2	J75M12231
6028	Liftoff Switch Pneumatic Assy, Holddown Arm #2	*J75M11078
6029	Liftoff Switch Distr. Assy, Holddown Arm #2	D75M11083
6031	Primary Liftoff Switch, Holddown Arm #4	J75M12231
6032	Secondary Liftoff Switch, Holddown Arm #4	J75M12231
6033	Liftoff Switch Pneumatic Assy, Holddown Arm #4	*J75M11078
6034	Liftoff Switch Distributor Assy, Holddown Arm #4	D75M11084
6062	Control Distr. #1	Assy. J75M10030 Wiring A75M10558
6063	Control Distr. #2	Assy. J75M10030 Wiring A75M10557
6064	Control Distr. #3	Assy. J75M10030-3 Wiring A75M10561
6067	Local Control Unit, S-IC Int.	Assy. J75M10898 Instl. J75M07578-1
6068	Control Console No. 1, S-IC Intertank	*J75M08751
6070	Reconnect Mech. S-IC Intertank	J75M08754
6071	Umb. Carrier, S-IC Intertank	Cable Assy. D75M09071
6072	LOX Carrier, S-IC Intertank	Cable Assy. D75M09071
6073	LH ₂ Carrier, S-IC Intertank	Cable Assy. D75M09071
6074	Service Arm Power "J" Box	Cable Assy. D75M09071
	*Electrical Installation Drawing	

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6075 6076 6122	Hinge Upper, S-IC Int. Hinge Lower, S-IC Int. Control Distr. #1	J75M08260-1 J75M08261-1 Assy.
6124	Control Distr. #3	J75M10030-5 Wiring A75M10559 Assy.
6127	Local Control Unit, S-IC FWD	J75M10030-7 Wiring A75M10562 Assy.
6128	Control Console No. 1	J75M10898 *J75M07578-3
6132	Umb. Carrier, S-IC Fwd	*J75M08746 Cable Assy.
6133	LOX Carrier, S-IC Fwd	D75M09074 Cable Assy.
6134	LH ₂ Carrier, S-IC Fwd	D75M09074 Cable Assy.
6135	Service Arm, Power "J" Box	D75M09074 Cable Assy.
6136	Hinge Upper, S-IC Fwd	D75M09074 J75M08260-1
6137	Hinge Lower, S-IC Fwd	J75M08261-1
6142	Control Distr. #1	Assy. J75M10030-9 Wiring
6144	Control Distr. #3	A75M10560 Assy. J75M10030-11 Wiring
6146	Console No. 2 "J" Box	A75M10563 Assy J75M07975 Harness D75M11336

* Electrical Installation Drawing

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6147	Local Control Unit, S-II Aft	Assy. J75M10898
6148	Control Console No. 1	*J75M07578-5
6149	Control Console No. 2	*J75M08741
6151	Umb. Carrier, S-II Aft	*J75M07976 Cable Assy. D75M09077
6152	LOX Carrier, S-II Aft	Cable Assy. D75M09077
6153	LH ₂ Carrier, S-II Aft	Cable Assy. D75M09077
6154	Service Arm Power "J" Box	Cable Assy. D75M09077
6155	Hinge Upper, S-II Aft	J75M08260-1
6156	Hinge Lower, S-II Aft	J75M08261-1
6162	Control Distr. #1	Assy. J75M10030-13 Wiring A75M10546
6163	Control Distr. #2	Assy. J75M10030-15 Wiring A75M10550
6164	Control Distr. #3	Assy. J75M10030-17 Wiring A75M10554
6165	Valve Panel No. 12 Control Distr.	Assy. F75M11650 Wiring A75M11644
6167	Valve Panel #12	J75M05958
6168	Control Console #1	J75M08735
6170	Local Control Unit, S-II Int.	Assy. J75M10898
	* Electrical Installation Drawing	*J75M07578-7

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6171	Umb. Carrier, S-II Int.	Cable Assy. D75M09080
6172	LOX Carrier, S-II Int.	Cable Assy. D75M09080
6173	LH ₂ Carrier, S-II Int.	Cable Assy. D75M09080
6174	Service Arm Power "J" Box	Cable Assy D75M09080
6175	Hinge Upper, S-II Int.	J75M08260-1
6176	Hinge Lower, S-II Int.	J75M08261-1
6202	Control Distr. #1	Assy. J75M10030-19
6203	Control Distr. #2	Wiring A75M10547 Assy. J75M10030-21
6204	Control Distr. #3	Wiring A75M10551 Assy. J75M10030-23
6206	Console No. 2 "J" Box	Wiring A75M10555 Assy. J75M07975
6207	Local Control Unit, S-II Fwd	Harness D75M11366 Assy. J75M10898
6208	Control Console #1	*J75M07578-9
6209	Control Console #2	*J75M08728
6212	Umb. Carrier, S-II Fwd	*J75M07977
6213	LOX Carrier, S-II Fwd	Cable Assy. D75M09084
6214	LH ₂ Carrier, S-II Fwd	Cable Assy. D75M09084

* Electrical Installation Drawing

**Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)**

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6215	Service Arm Power "J" Box	Cable Assy.
		D75M09084
6216	Hinge Upper, S-II Fwd	J75M08260-1
6217	Hinge Lower, S-II Fwd	J75M08261-1
6222	Control Distr. #1	Assy.
		J75M10030-25
		Wiring
		A75M09346
6223	Control Distr. #2	Assy.
		J75M10030-27
		Wiring
		A75M09347
6224	Control Distr. #3	Assy.
		J75M10030-29
		Wiring
		A75M09348
6226	Console #2 "J" Box	Assy
		J75M07975
		Harness
		D75M11366
6227	Local Control Unit, S-IVB Aft	Assy.
		J75M10898
		*J75M07578-11
6228	Control Console #1	*J75M08726
6229	Control Console #1	J75M07978
6231	Umb. Carrier, S-IVB Aft	Cable Assy.
		D75M09088
6232	LOX Carrier, S-IVB Aft	Cable Assy.
		D75M09088
6233	LH ₂ Carrier, S-IVB Aft	Cable Assy.
		D75M09088
6234	Service Arm Power "J" Box	Cable Assy.
		D75M09088
6235	Hinge Upper, S-IVB Aft	J75M08260-1
6236	Hinge Lower, S-IVB Aft	J75M08261-1
	* Electrical Installation Drawing	

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6262	Control Distr. #1	Assy. J75M10030-31 Wiring A75M10548
6263	Control Distr. #2	Assy. J75M10030-33 Wiring A75M10552
6264	Control Distr. #3	Assy. J75M10030-35 Wiring A75M10556
6266	Console #2 "J" Box	Assy. J75M07975 Harness D75M11366
6267	Local Control Unit, S-IVB Fwd	Assy. J75M10898 *J75M07578-13
6268	Control Console #1	*J75M08721
6269	Control Console #2	*J75M07979
6271	Umb. Carrier, S-IVB Fwd	Cable Assy. D75M09092 Cable Assy. D75M09092
6272	LOX Carrier, S-IVB Fwd	Cable Assy. D75M09092 Cable Assy. D75M09092
6273	LH ₂ Carrier, S-IVB Fwd	Cable Assy. D75M09092 Cable Assy. D75M09092
6274	Service Arm Power "J" Box	Cable Assy. D75M09092 J75M08260-1
6275	Hinge Upper, S/M	J75M08261-1
6276	Hinge Lower, S/M	Cable Assy. D75M09092
6291	Umb. Plate, Inst. Unit S-IVB Fwd	Cable Assy. D75M09092
* Electrical Installation Drawing		

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6302	Control Distr. #1	Assy. J75M10030-37 Wiring A75M10549
6303	Control Distr. #2	Assy. J75M10030-39 Wiring A75M10553
6304	Control Distr. #3	Assy. J75M10030-41 Wiring A75M10557
6306	Console #2 "J" Box	*J75M07975
6307	Local Control Unit, S/M	Assy. J75M10898 *J75M07578-15
6308	Control Console #1	*J75M09055
6309	Control Console #2	*J75M09052
6311	Umb. Carrier, S/M	Cable Assy. D75M09096
6312	LOX Carrier, S/M	Cable Assy. D75M09096
6313	LH ₂ Carrier, S/M	Cable Assy. D75M09096
6314	Service Arm Power "J" Box	Cable Assy. D75M09096
6315	Hinge Upper, C/M	J75M12139-1
6316	Hinge Lower, C/M	J75M12139-3
6322	Control Distr. #1	Assy. J75M10030-49 Wiring A75M12674
6324	Control Distr. #3	Assy. J75M10030-51 Wiring A75M12675
	* Electrical Installation Drawing	

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6325	Local Cont. Unit, C/M	Assy. J75M10898
6326	Oxygen Conditioning Console	*J75M07578-17
6327	Service Arm Lighting "J" Box	J75M11608 Cable Assy. D75M09100
6328	Control Console #1	*J75M08722
6329	Accumulator Bottles	J75M05974
6357	Environmental Chamber	*J75M07104
6360	Q-Ball Control Panel	D75M06150
6361	Q-Ball Cover Control Distr.	F75M13155
6401	Flush & Purge Boom	delete
6402	Flush & Purge Distr.	delete
6404	He Distribution Panel	J75M07022
6405	GN ₂ Distribution Panel	J75M07021
6406	High Press Pneu. Distr. System	delete
6407	High Pressure Pneumatics Control Distr.	J75M11649
6413	Power Distr. S/A	J75M10671
6414	Power Distr. S/A	J75M10670
6415	Safety Sw.	D75M12973
6416	Distr. Assy Hyd Unit #2	D75M07071
6417	Starter Assy Hyd Unit #2	D75M07073
6418	Control Pnl Hyd Unit #2	D75M07070
6419	Motor Assy Hyd Unit #2	B75M08506
6420	Safety Sw. Hyd Unit #2	D75M12973
6421	Pwr Supply Launcher Acc.	delete
6422	Cable Installation Rack	J75M12096
6423	Distr. Assy Hyd Unit #1	D75M07071
6424	Starter Assy Hyd Unit #1	D75M07073
6425	Cont. Pnl. Assy Hyd Unit #1	D75M07070
6426	Motor Assy Hyd Unit #1	B75M08506
6427	Fuse Panel	delete
6428	Fuse Panel	delete
6429	Interface Plate, Launcher Pwr Distr	delete

*Electrical Installation Drawing

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6430	Pwr Module, Launcher Pwr Distr. 2	delete
6431	Pwr Module Launcher Pwr Distr. 1	delete
6432	Pwr Module, Spare	delete
6433	Power Transfer Module Chassis	delete
6434	Pwr Transfer Unit Batt. Rack	delete
6604	Deluge Purge Panel	delete
6605	Valve Panel #11	J75M07433
6606	Engine Service Platform Relay Distr.	E75M13471
6611	Launch Aux. Relay Patch Distr.	
6612	Flush & Purge Power Supply	
6613	Service Arm Control Rack #2	D75M08922
6614	Service Arm Control Rack #3	D75M08923
6615	Service Arm Control Rack #4	D75M08924
6616	Service Arm Control Rack #5	D75M08925
6617	Service Arm Control Rack #6	D75M08926
6618	Service Arm Control Rack #7	D75M08927
6619	Service Arm Control Rack #9	D75M08928
6620	Service Arm Control Rack #8	D75M08931
6621	Relay Distr. (Spare)	F75M04681
6622	LUT Integration Rack #1	D75M14069
6623	LUT Integration Rack #2	D75M15420
6629	Meter Panel, Integration Rack	J75M10165
6636	Purge Valve #1	B75M14551-1
6637	Purge Valve #2	B75M14551-1
6638	Purge Valve #3	B75M14551-1
6639	Purge Valve #4	B75M14551-1
6640	Crossover Distr. S-IC, Room 13-A	delete
6641	Crossover Distr. S-IC, Room 5-A	delete
6650	Launcher Access. Relay Rack #1	J75M12976
6651	Launcher Access. Relay Rack #2	J75M12977
6652	Hydraulic Charging Unit Electric Distr. #2	D75M07071
6653	Hydraulic Charging Unit Starter Panel #2	D75M07073
6654	Hydraulic Charging Unit Control Panel #2	D75M07070
6655	Hydraulic Charging Unit Pump Motor #2	Cable Assy. D75M07072
	* Electrical Installation Drawing	

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6656	Connector Plate, Relay Rack	Assy. . J75M09711
6657	Connector Plate, Relay Rack	Assy. J75M09711
6658	Connector Plate, Relay Rack	Assy. J75M09711
6659	Connector Plate, Relay Rack	Assy. J75M09711
6660	Connector Plate, Relay Rack	Assy. J75M09711
6661	Connector Plate, Relay Rack	Assy. J75M09711
6662	Connector Plate, Relay Rack	Assy. J75M09711
6663	Connector Plate, Relay Rack	Assy. J75M09711
6664	T. S. Mast Relay Distr. Int. Plate	Assy. J75M09711
6665	Launcher Access Distr. Int. Plate	Assy. J75M09711
6667	Valve Panel #11 Control Distr.	F75M11652
6700	Interface Plate, Launcher Power Rack	Assy. J75M09711-1
6701	Fuse Panel Assy	*J75M12096 Assy. J75M10163-1
6710	Power Module Frame Assy	*J75M12096 D75M12301
6711	Power Module R/ASTP Integration	Assy. *J75M12096
6712	Power Module, Launcher Accessories Distr. #1	Assy. *J75M12096
6713	Power Module, Launcher Accessories Distr. #2	Assy. *J75M12096
6714	Power Module Spare	*J75M12096 Assy. *J75M12096

* Electrical Installation Drawing

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
6717	Power Module GETS #1	Assy. *J75M12096
6718	Power Module GETS #2	Assy. *J75M12096
6726	Bus Distributor	*J75M12096
6727	Bus Distributor	*J75M12096
7200	F1 Engine Change Platform (VAB)	*J75M51342
7201	F1 ESP Platform Distr.	E75M13209
7202	S-IC Engine Service Top Plate (VAB)	J75M09312-5A
7203	S-IC Engine Service Boom Plate (VAB)	J75M09312-3A
7204	Distribution Box, S-II Engine Servicing Platform	B75M14680
7205	"J" Box Winch #1	B75M14683
7206	"J" Box Winch #2	B75M14683
7207	"J" Box Winch #3	B75M14683
7208	"J" Box Winch #4	B75M14683
7601	Tail Mast Test Set	E75M07658
7602	Launcher Accessories Test Set No. 2	J75M11087
7603	Portable Arm Control Console	J75M07542
7604	Portable Control Unit Distr.	delete
7605	Portable Control Unit Power Supply	
7606	Tower Test Set	E75M14137
7607	Portable Power Supply (Pneumatic)	
7650	Launcher Acc. Test Set No. 1	E75M14009
7656	GETS	E75M13286
7657	GETS Simulator	E75M13286
7658	Launcher Test Set	
7850	Platform Motor & Brake Assy #1	*J75M51413
7851	Platform Motor & Brake Assy #2	*J75M51413
7852	Platform Motor & Brake Assy #3	*J75M51413
7853	Platform Motor & Brake Assy #4	*J75M51413
7854	Platform Motor & Brake Assy #5	*J75M13064
7855	Umbilical Plate, TSM 3-4	J65B80001
7856	Umbilical Plate, TSM 1-2	J65B80002
7857	Umbilical Plate, TSM 3-2	J65B80003
	* Electrical Installation Drawing	

**Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)**

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
7858	Haunch Plate, Holddown Arm #1	J75M05972
7859	Haunch Plate, Holddown Arm #2	J75M05972
7860	Haunch Plate, Holddown Arm #3	J75M05972
7861	Haunch Plate, Holddown Arm #4	J75M05972
7862	LUT Level Interface Plate Aux Motor "A"	*J75M51413
7863	LUT Level Interface Plate Motor Brake "A"	*J75M51413
7865	LUT Level Interface Plate Aux Motor "B"	*J75M51413
7866	LUT Level Interface Plate Motor & Brake "B"	*J75M51413
7867	LUT Level Interface Plate Aux Motor "C"	*J75M51413
7868	LUT Level Interface Plate Motor & Brake "C"	*J75M51413
7869	LUT Level Interface Plate Aux Motor "D"	*J75M51413
7870	LUT Level Interface Plate Motor & Brake "D"	*J75M51413
7872	LUT Level "0" Platform Elect. System	*J75M51639
7950	Distributor Box #1, Platform Transporter Control North	B75M14679-1
7951	Distributor Box #2, Platform Transporter Control North	B75M14679-2
7952	Portable Controller, Platform Transporter Control	B75M14682
7953	Distributor Box #1, Platform Transporter Control South	B75M14679-3
7954	Distributor Box #2, Platform Transporter Control South	B75M14679-4
7955	Portable Controller, Platform Transporter Control South	B75M14682
7956	Motor/Winch Bulkhead, Platform Transporter Control #1	J75M14891
7957	Motor/Winch Bulkhead, Platform Transporter Control #2	J75M14891
9001	LUT - Pad Interface, Power	F75M12270
9002	LUT - Crawler Interface, PWR	F75M05121
9006	UB. Instr. & Control Term Distr	F75M05121
9008	UB. Instr. & Control Term Distr-80' (MSC)	F75M12270
9009	UB. Power Term Distr-80' (MSC)	F75M12270
9010	UB. Instr. & Control Term Distr-100'	F75M05121
	*Electrical Installation Drawing	

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
9013	UB. Power Term Distr-120' (S-IC FWD)	F75M05121
9014	UB. Instr & Control Term Distr - 140'	F75M05121
9016	UB. Instr & Control Term Distr - 160'	F75M05121
9017	UB. Power Term Distr - 160'	F75M05121
9020	UB. Instr & Control Term Distr-200'	F75M05121
9022	UB. Instr & Control Term Distr-220'	F75M05121
9023	UB. Power Term Distr-220'	F75M05121
9025	UB. Instr & Control Term Distr-260'	F75M05121
9026	UB. Instr & Control Term Distr-260'	F75M05121
9027	UB. Power Term Distr-260'	F75M05121
9028	UB. Instr & Control Term Distr-280'	F75M05121
9029	UB. Power Term Distr-280'	F75M05121
9030	UB. Instr & Control Term Distr-300'	F75M05121
9031	UB. Power Term Distr-300'	F75M05121
9032	UB. Instr & Control Term Distr-320'	F75M05121
9033	Prop. Loading A.C. PWR "J" Box-30'	F75M05121
9034	Prop. Loading A.C. PWR "J" Box-120'	F75M05121
9035	Prop. Loading A.C. PWR "J" Box-200'	F75M05121
9038	Crane	F75M05120
9042	UB. Power "J" Box 30' Tower Level	F75M05121
9043	UB. Power "J" Box 60' Tower Level	F75M05121
9044	UB. Power "J" Box 120' Tower Level	F75M05121
9045	UB. Power "J" Box 140' Tower Level	F75M05121
9046	UB. Power "J" Box 200' Tower Level	F75M05121
9047	UB. Power "J" Box 320' Tower Level	F75M05121
9048	OTV Cables, Phase III	F75M12270
9049	Measuring Acquisition Term Distrs.	F75M05121
9050	Measuring Coax Term. Distrs.	F75M05121
9051	UB. Instr & Control Distr-300' (MSC)	F75M12270
9052	Service Arm MI Term Distr-120' Level	F75M05121
9054	Service Arm MI Term Distr-160' Level	F75M05121
9055	Service Arm MI Term Distr-200' Level	F75M05121
9056	Service Arm MI Term Distr-220' Level	F75M05121
9057	Service Arm MI Term Distr-260' Level	F75M05121

* Electrical Installation Drawing

Table 6-4 REFERENCE DESIGNATION NUMBERS VERSUS ASSY
DRAWING NUMBERS (Continued)

Reference Designation Number	Assembly	Assembly Drawing or Installation Drawing
9059	Service Arm MI Term Distr-300' Level	F75M05121
9060	Coax Distr - MSC. 300' Level	F75M12270
9061	Service Arm Lighting Junction Boxes	F75M05121
9062	Service Arm Emergency PWR. "J" Boxes	
9063	"J" Box, S-IC FWD Foamflex (120')	F75M12270
9064	"J" Box, S-II FWD Foamflex (200')	F75M12270
9065	"J" Box, S-IVB FWD Foamflex (260')	F75M12270
9068	Power Panel ("A" Suffixes)	F75M05121
9069	Lighting Panel ("A" Suffixes)	F75M05121
9070	Term. Rm. Instr & Control Distr.	F75M05121
9072	Rm. 1-A Instr & Control Distr.	
9073	Rm. 7-B Power Term Distr.	F75M05121
9074	MSC PWR Distr Rm. 1-A	F75M12270
9075	Anem & Film Camera Distr 9-B	F75M12270
9076	Coax Cable, Meas, 10B Rack 42	
9077	Pair Cables, Meas, 10B Rack 43	
9078	S-IC Eng. Ign. Term. Distr, Rm. 7-B	
9081	Rm. 8-A Instr & Control Distr.	
9082	Rm. 7-A Instr & Control Distr.	F75M05121
9083	Firing Distributor	F75M05121
9084	ML Water Control Cabinet	F75M05121
9085	Prop Loading AC PWR "J" Box, Rm. 7-A	
9086	Inst Gnd Plates, MSC, Rm. 1-A	
9087	Computer Interface, Rm. 10-A	
9088	Computer Interface, Rm. 7-A	
9089	Computer Interface, Rm. 7-A	
9090	No. 1 Tail Service Mast Instr & Control	
9091	No.1 Tail Service Mast Instr & Control, Rm. 13-B	
	Term Distr Rm. 13-A	
9092	No.2 Tail Service Mast Instr & Control Term Distr	
	Rm. 5-A	
9093	S-IC AFT PWR. Distr No. 1 Rm. 13-A	
9094	S-IC AFT PWR. Distr No. 2 Rm. 5-A	
9095	Prop Loading AC PWR "J" Box, Rm. 4-A	
9099	PTCR-LUT Instr & Control Interface	
	* Electrical Installation Drawing	

5000-5049	ENVIRONMENTAL CONTROL SYSTEM	6380-6399	380'
5050	LH ₂ STORAGE AREA	6360-6379	360'
5051	LOX STORAGE AREA	6340-6359	340'
5052	RP-1 STORAGE AREA	6320-6339	320'
5053-5054	(FUTURE)	6300-6319	300'
5055-5079	PNEUMATICS SYSTEM (CCF)	6280-6299	280'
5080-5099	PAD & PERIMETER AREA	6260-6279	260'
5100-5299	PTCR (1st & 2nd FLOOR)	6240-6259	240'
5300-5999	LCC (FIRING ROOMS 1 THRU 4)	6220-6239	220'
		6200-6219	200'
6900-6999	(FUTURE)	6180-6199	180'
7000-7199	ARMING TOWER	6160-6179	160'
7200-7499	VAB	6140-6159	140'
7500-7549	MOBILE LAUNCHER ERECT. & REFURB.	6120-6139	120'
7550-7599	CRAWLER - TRANSPORTER	6100-6119	100'
7600-7799	PORTABLE TEST EQUIPMENT	6080-6099	80'
7800-7814	PNEUMATICS STORAGE BATTERY (VAB)	6060-6079	60'
7815-7829	PNEUMATICS STORAGE BATTERY (PAD)	6040-6059	40'
7830-8999	(FUTURE)	6020-6029	20'
		LEVEL "D" 6600-6899	
9000-9099	MOBILE LAUNCHER TERM. DISTR.	LEVEL "E" 6400-6599	
9100-9299	LCC TERMINAL DISTRIBUTORS		
9300-9499	VAB TERMINAL DISTRIBUTORS		
9500-9699	PTCR TERMINAL DISTRIBUTORS		
9700-9799	ARMING TOWER TERM. DISTR.		
9800-9899	OTHER LAUNCH AREA TERM. DISTR.		
9900-9999	(FUTURE)		

Figure 6-7 Reference Designation Assignment Areas, LC-39